



Tyro EFTPOS

Configuring the Terminals for your Network

Setup Wizard

Tyro terminals offer a 'Setup Wizard' to allow you to easily configure the terminal to operate on your network.

The Setup Wizard starts automatically the first time you turn on your terminal plus it can also be run again at any time by pressing **Menu > Settings > Network > Setup Wizard** (Admin password required).

Network Interface (Ethernet, WiFi or GPRS)

After starting the Setup Wizard, the first step is to select which network interface to use. Our terminals support the following network interfaces:

Desktop (Xenta) terminal

1. Ethernet
2. WiFi (optional add on)
3. GPRS (optional add on)

Mobile (Xentissimo) terminal

1. GPRS
2. WiFi

Typically, the desktop terminals ship with only the Ethernet option available so the network interface selection screen does not appear and Ethernet is set as the default interface. Only if either the WiFi or GPRS module has been installed prior to shipping will you be offered a choice of network interface.

The mobile terminals typically support both GPRS and WiFi so you will be offered the choice of GPRS or WiFi.

WiFi (WLAN) Configuration

If you selected WiFi as the network interface, the terminal will then scan the area for wireless networks. Once the scan is complete, the terminal will list the available networks in alphabetical order. Use the up and down arrows to select your network and press the OK button. If your network doesn't appear in the list then one of the following may be the cause:

1. The terminal is too far away from the access point.
2. The WiFi network is hidden.
3. The WiFi network security settings are inadequate. The WiFi network must use either WPA or WPA2. Other protocols such as WEP and no security are not acceptable for use with Tyro terminals.

Once you have selected your WiFi network, enter the passphrase for the network and press OK.

IP Address Configuration (Static IP or DHCP)

Following the choice of network interface, the terminal offers you the choice of selecting DHCP for automatic, or STATIC for manual IP address configuration. You should choose DHCP unless your network does not support it in which case, you can select STATIC to enter in the IP address details manually. IP Address configuration is not offered if GPRS is selected as the network interface.

If you choose STATIC then you will need to enter the following information:

1. IP Address
2. Netmask
3. Gateway IP address
4. DNS server IP address

Completing the Setup

Once the IP Address configuration has been completed, the terminal prints out a receipt showing the details of the configuration that has been set. Press the FINISH button to accept the changes or press the BACK button to go back and make further changes. Once the FINISH button has been pressed, the terminal needs to reboot to apply the new settings.

Note: Please refer to your network administrator for WiFi or IP Address configuration details.

tyro payments

125 york street
sydney nsw 2000
p+61 2 8907 1700
f+61 2 8907 1777
www.tyro.com